





HPO 包縫車用拖輪安裝手冊  
THE INSTRUCTION GUIDE BOOK  
FOR OVERLOCK PULLER

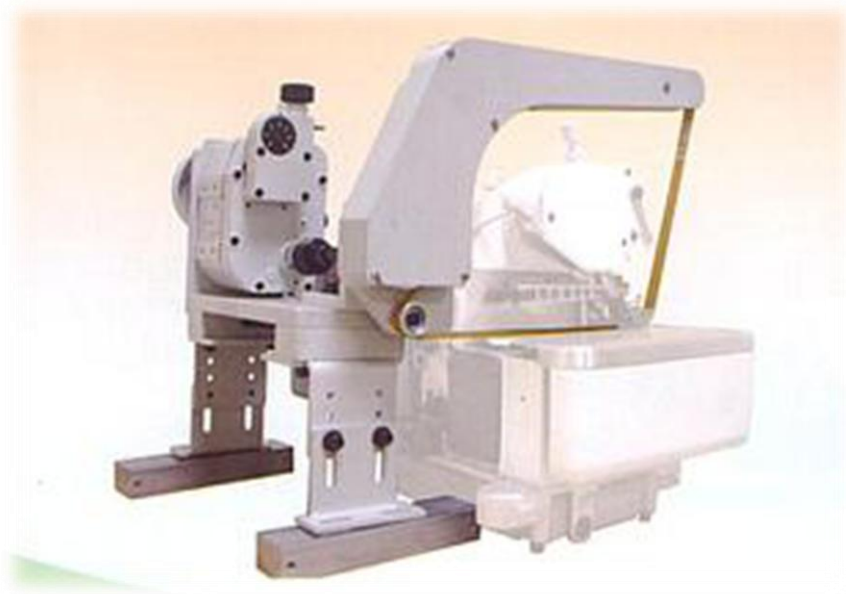

安裝前,請詳細閱讀安裝說明書


PLEASE READ INSTRUCTIONS & ASSOCIATED DRAWINGS BEFORE INSTALLATION

# HPO 快速安裝指南 QUICK INSTALL GUIDE

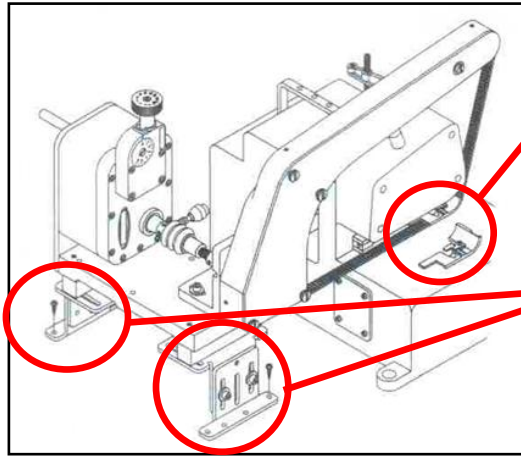

1. 更換壓腳 Change stand

2. 將拖輪底座固定於車板上 Fixing the base on the plank

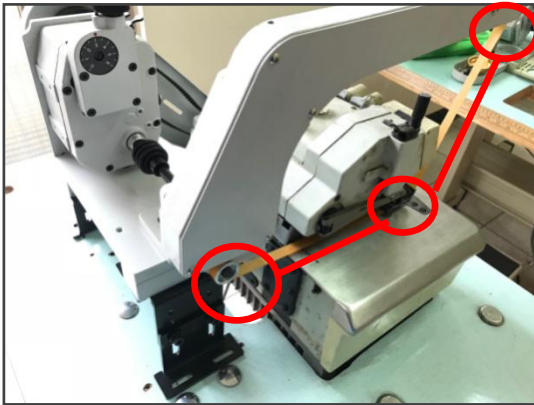


3. 皮帶拉直 Straighten the belt

4. 入力軸定位  
Adjust input shaft position

<p>一般針車定位時， 針車提升至最高點 General type, needle to the toppest position</p>	<p>針送針車定位時， 針車下降至最低點 Needle feed type, needle to the lowest position</p>

變速機的紅線對齊入力軸紅線後，上緊時規齒輪螺絲  
Meet the both red line on transmission input shaft,  
tighten the timing gear screw

5.1 安裝皮帶輪 Installing the pulleys

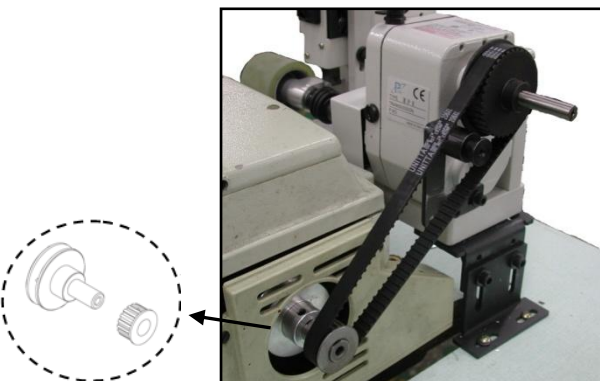

5.2 固定皮帶蓋 Installing the belt covering

